


Available in Simple UI 1C Click 1H Hold 2C Click, click 2H Click, hold 3C Click, click, click 3H Click, click, hold (and so on)

Operating Modes

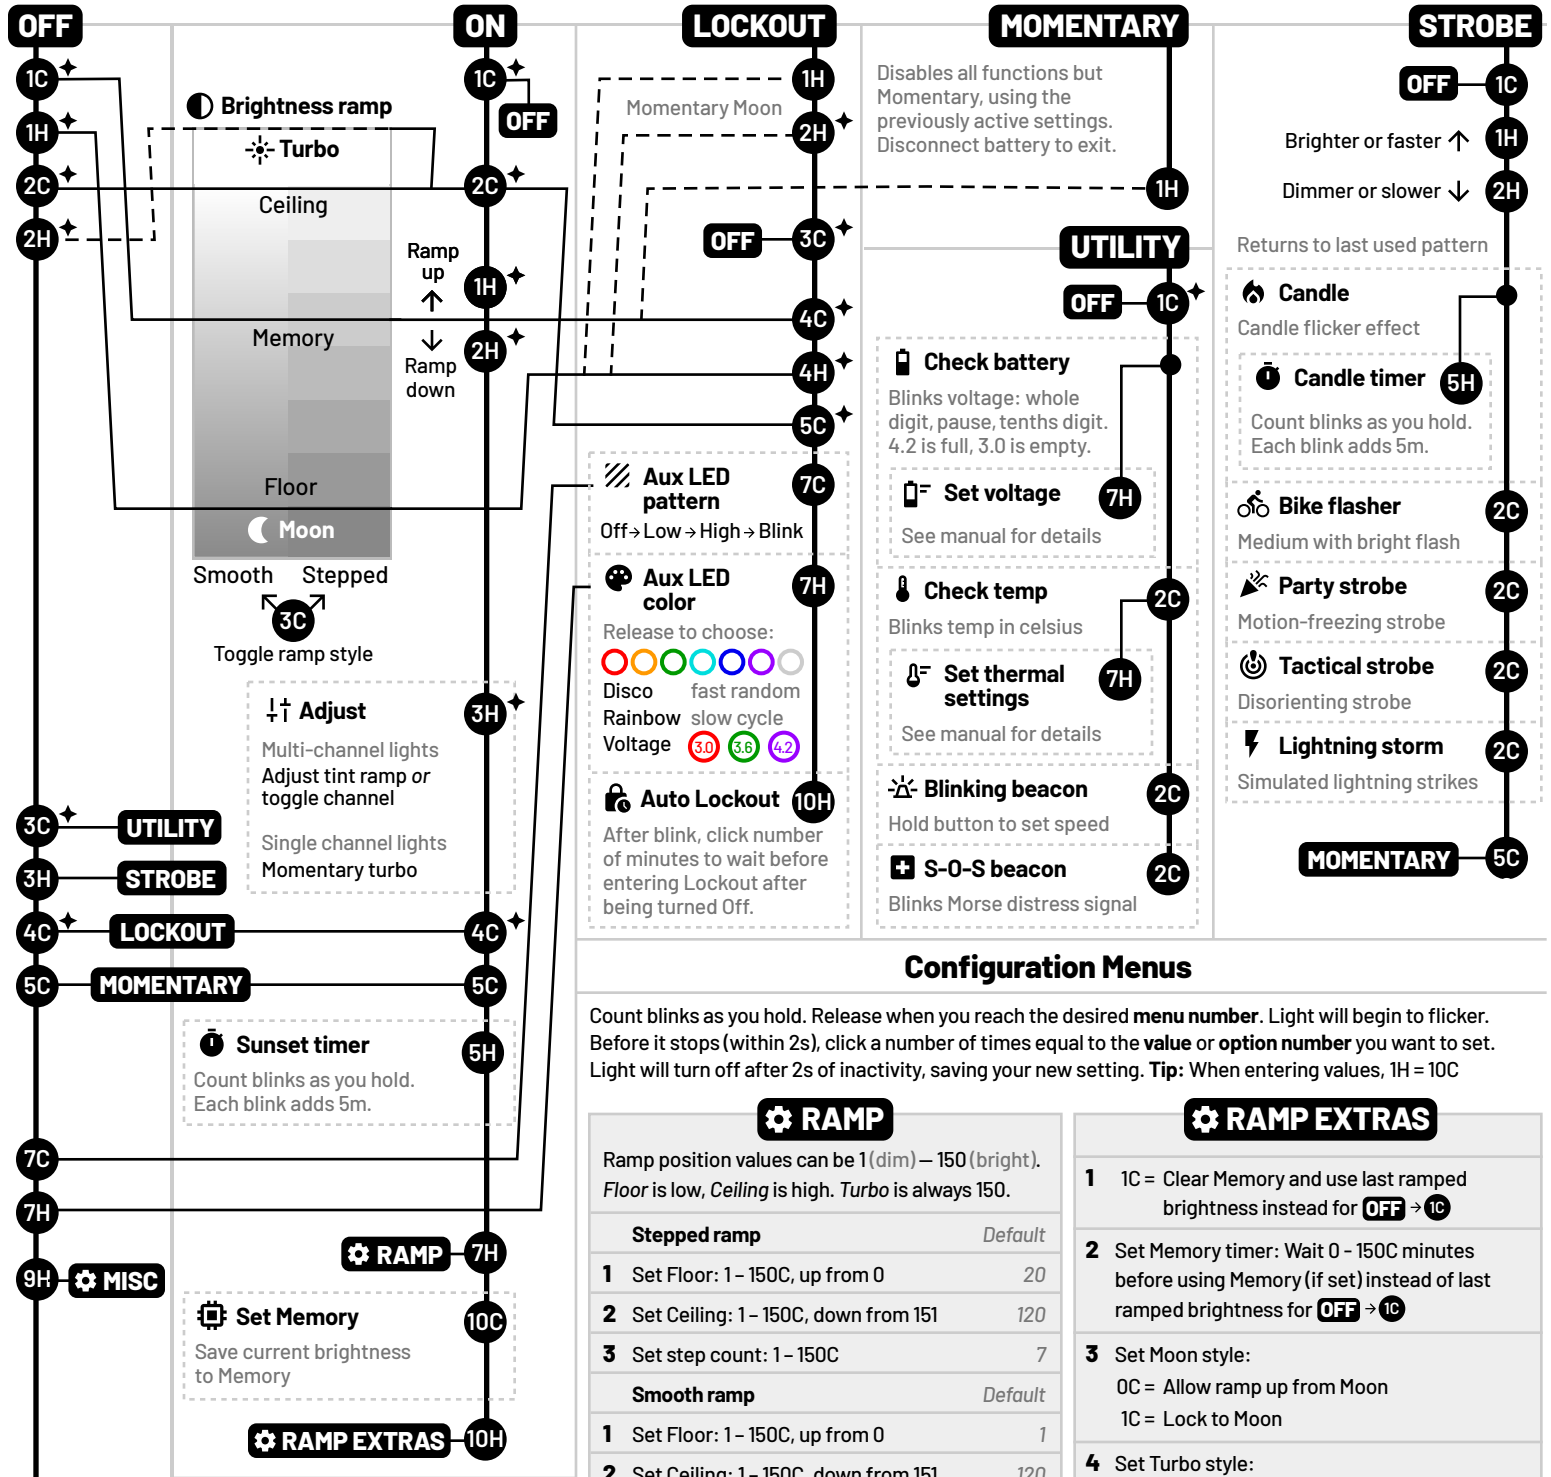

Configuration Menus

Count blinks as you hold. Release when you reach the desired **menu number**. Light will begin to flicker. Before it stops (within 2s), click a number of times equal to the **value** or **option number** you want to set. Light will turn off after 2s of inactivity, saving your new setting. **Tip:** When entering values, 1H = 10C

RAMP

Ramp position values can be 1 (dim) – 150 (bright). Floor is low, Ceiling is high. Turbo is always 150.

Stepped ramp	Default
1 Set Floor: 1 – 150C, up from 0	20
2 Set Ceiling: 1 – 150C, down from 151	120
3 Set step count: 1 – 150C	7
Smooth ramp	Default
1 Set Floor: 1 – 150C, up from 0	1
2 Set Ceiling: 1 – 150C, down from 151	120
3 Set ramp speed: 1C (fast) – 4C (slow)	1

SIMPLE UI

	Default
1 Set Floor: 1 – 150C, up from 0	20
2 Set Ceiling: 1 – 150C, down from 151	120
3 Set step count: 1 – 150C	5
4 Set Turbo style:	0
0C = No Turbo, only Ceiling	
1C = ON → 2C immediate Turbo	
2C = ON → 2C first ceiling, then 2C Turbo	

RAMP EXTRAS

- 1C = Clear Memory and use last ramped brightness instead for OFF → 1C
- Set Memory timer: Wait 0 – 150C minutes before using Memory (if set) instead of last ramped brightness for OFF → 1C
- Set Moon style:
0C = Allow ramp up from Moon
1C = Lock to Moon
- Set Turbo style:
0C = No Turbo, only Ceiling
1C = ON → 2C immediate Turbo
2C = ON → 2C first ceiling, then 2C Turbo

MISC

This menu supports features that aren't available on all lights (see manual for details).

- Set channel adjustment style:
0C = Blend between channels (tint ramp)
1C = Toggle between channels
- Set jump start level: 1 – 150C

Simple UI

Turn Simple UI on. Limit brightness and disable all functions not marked ✦. On by default when new and after reset.

Turn Simple UI off. If it's already off, SIMPLE UI

Reset light

Or reconnect tailcap while holding button for 4s

Version check

YYYY MM DD BB PP: year, month, day, brand, product